

SUBJECT	PAGE	SUBJECT	PAGE
Accessories	14-1	Periodic Service	5-2
Automatic Headlamp Control		Reconditioning	5-6
"Autronic Eye"	14-17	Special Tools	5-48
Back-Up Lamps	14-11	Specifications	5-12
Electric Antenna	14-2		
Electric Clock	14-15	Brakes, Power	
Electric Windshield Wiper	14-15	Bendix	5-13
Handicap Controls	14-16	Adjustment	5-18
Klaxon K-3 Horn	14-16	Assembly of Unit	5-23
Radio, Electramatic	14-1	Cleaning and Inspection	5-22
Radio, Deluxe	14-2	Diagnosis and Testing	5-27
Underseat Heater and Defroster	14-13	Disassembly of Unit	5-19
Windshield Washer	14-11	General Description	5-13
		Installation of Unit	5-26
Antenna, Electric	14-2	Minor Repair	5-18
Assembly	14-3	Periodic Service	5-18
Disassembly	14-3	Principles of Operation	5-15
Operation	14-2	Removing Unit	5-18
Removal	14-3	Special Tools	5-48
		Specifications	5-28
Antenna Trimmer Adjustment		Moraine	5-29
Deluxe Electramatic Radio	14-1	Adjustment	5-33
Deluxe Radio	14-2	Assembly of Unit	5-43
		Cleaning and Inspection	5-42
Anti-Freeze	6A-7	Diagnosis and Testing	5-47
		Disassembly of Unit	5-33
Axle Shaft	4-3	General Description	5-29
Bearing Replacement	4-5	Installation of Unit	5-47
Oil Seal Replacement	4-5	Minor Repair	5-33
Unit Replacement	4-5	Periodic Service	5-33
		Principles of Operation	5-30
Battery	12-4	Removing Unit	5-33
Charging	12-13	Repair of Unit	5-43
Periodic Service	12-7	Special Tools	5-48
Specifications	12-52	Specifications	5-48
Testing	12-8, 12-14		
		Breaker Points	12-28
Bleeding Brakes	5-5	Install	12-36
		Trouble Diagnosis and Testing	12-37
Body	1-1		
Adjustments	1-1	Camshaft Bearing Installation	6-42
Serial Number and Body Number Location	1-1		
Shimming	1-2	Camshaft, Clean and Inspect	6-33
		Camshaft, Replace	6-19
Brakes, Standard	5-1	Camshaft Thrust Plate, Inspect	6-36
Adjustments on Car	5-3		
Cautions	5-12	Car Model Identification	00-2
Diagnosis and Testing	5-8		
General Description	5-1	Carter Carburetor AFB (4-Barrel)	6B-35
Inspection	5-7		
Minor Repair	5-5		
Bleeding	5-5		
Flushing	5-6		

SUBJECT	PAGE	SUBJECT	PAGE
Carburetor		Connecting Rod Bushing Replacement	6-39
Adjustment on Car		Cooling System, Engine	6A-1
Carter AFB (4-Barrel)	6B-39	Anti-Freeze	6A-7
Rochester 2GC (2-Jet)	6B-6	Adding	6A-8
Rochester 4GC (4-Jet)	6B-21	Preparation For	6A-7
Description		Testing	6A-8
Air Cleaner and Silencer	6B-1	Description	6A-1
Carter AFB (4-Barrel)	6B-35	Minor Repair	6A-8
Rochester 2GC (2-Jet)	6B-2	Oil Filter	6A-9
Rochester 4GC (4-Jet)	6B-16	Oil Pump	6A-8
Diagnosis and Testing		Radiator	6A-9
Carter AFB (4-Barrel)	6B-51	Thermostat	6A-8
Rochester 2GC (2-Jet)	6B-14	Water Pump	6A-9
Rochester 4GC (4-Jet)	6B-34	Overhaul Oil Pump	6A-9
Overhaul and Adjustment		Periodic Service	6A-7
Carter AFB (4-Barrel)	6B-39	Special Tools	6A-11
Rochester 2GC (2-Jet)	6B-7	Specifications	6A-11
Rochester 4GC (4-Jet)	6B-22	Trouble Diagnosis	6A-10
Special Tools		Core Hole Plugs, Replace	6-18
Carter AFB (4-Barrel)	6B-52	Crankcase Ventilating System	6A-5
Rochester 2GC (2-Jet)	6B-15	Crankshaft and Bearings, Clean and Inspect	6-36
Rochester 4GC (4-Jet)	6B-34	Cylinder Block, Clean and Inspect	6-33
Specifications		Cylinder Head Gasket Replacement	6-12
Carter AFB (4-Barrel)	6B-52	Cylinder Head and Valves, Overhaul	6-26
Rochester 2GC (2-Jet)	6B-15	Defroster	14-12
Rochester 4GC (4-Jet)	6B-34	Differential	4-3
Carburetor Air Cleaner and Silencer	6B-1	Description	4-3
Chassis Sheet Metal	11-0	Diagnosis and Testing	4-21
Cigar Lighter	12-40	Installation	4-21
Replace	12-44	Minor Repairs	4-3
Replace Fuse	12-44	Periodic Service	4-3
Clock, Electric	14-15	Removal	4-6
Clutch	6C-1	Repair	4-6
Adjustment	6C-3	Specifications	4-30
Description	6C-1	Differential Carrier, Remove and Replace	4-20
Inspection	6C-4	Differential Case, Remove and Replace	4-19
Installation	6C-4	Directional Signal	12-42
Periodic Service	6C-2		
Removal	6C-3		
Specifications	6C-5		
Clutch Housing Alignment	7-11		
Clutch Pilot Bearing Replacement	6-23		
Coil Diagnosis and Testing	12-37		
Connecting Rod Bearing Replacement	6-45		

SUBJECT	PAGE	SUBJECT	PAGE
Distributor	12-28	Piston Replacement	6-37
Adjust Ignition Timing	12-31	Piston Ring Installation	6-41
Assembly and Point Installation	12-36	Valve Lifter	6-30
Diagnosis and Testing	12-37	Periodic Service	6-8
Disassembly	12-34	Push Rod Cover or Gasket, Replace	6-11
Installation	12-36	Rear Main Bearing Seal, Replace	6-21
Specifications	12-37	Removal, Engine	6-24
Electric Clock	14-15	Rocker Arm Stud, Replace	6-13
Engine		Special Tools	6-53
Cooling System	6A-1	Specifications	6-48
Description	6-1	Timing Chain Cover or Gasket, Replace	6-16
Electrical	12-1	Timing Chain, Replace	6-19
Fuel	6B-1	Timing Sprocket Oil Seal, Replace	6-17
Oiling System	6A-3	Torque Specifications	6-51
Engine Assembly	6-43	Exhaust Manifold or Gasket, Replace	6-10
Engine Disassembly	6-24	Exhaust System	8-1
Engine Detonation or Spark Knock	00-6	Description	8-2
Engine Mechanical	6-1	Exhaust Crossover Pipe Replacement	8-3
Camshaft, Replace	6-19	Exhaust Pipe Replacement	8-3
Core Hole Plugs, Replace	6-19	Muffler Replacement	8-3
Cylinder Head or Gasket, Replace	6-12	Specifications	8-3
Exhaust Manifold or Gasket, Replace	6-10	Tail Pipe Replacement	8-3
Fan Belt, Adjust	6-8	Fan Belt Adjustment	6-8
Flywheel, Replace	6-23	Filter Element, Oil, Replace	6A-7
Fuel Pump Eccentric, Replace	6-16	Flushing Cooling System	6A-7
Harmonic Balancer, Replace	6-16	Flywheel Replacement	6-23
Hydraulic Valve Lifter, Replace	6-14	Frame	2-1
Installation, Engine	6-47	Checking Chart	2-1
Insulators (Motor Mounts), Replace	6-15	General Description	2-1
Intake Manifold or Gaskets, Replace	6-9	Repair	2-1
Intake Valve Stem or Shield, Replace	6-11	Front Shock Absorber Replacement	3-7
Oil Pan, Replace	6-20	Front Spring Replacement	3-10
Overhaul		Front Stabilizer Replacement	3-14
Assembly	6-43	Front Suspension	3-1
Camshaft Bearings	6-43	Adjustments	3-3
Camshaft, Clean and Inspect	6-36	Alignment Checking	3-4
Camshaft Thrust Plate, Inspect	6-36	Diagnosis and Testing	3-14
Connecting Rod Bearings	6-45	General Description	3-1
Connecting Rod Bushings	6-39	Minor Repairs	3-7
Crankshaft and Bearings,		Periodic Service	3-2
Clean and Inspect	6-33		
Cylinder Block, Clean and Inspect	6-33		
Cylinder Head and Valves	6-26		
Disassembly	6-24		
Main Bearings	6-43		
Piston Pins	6-39		

SUBJECT	PAGE	SUBJECT	PAGE
Front Suspension (cont.)		Lubrication	0-3
Remove and Replace		Repair	12-13
Front Shock Absorber	3-7	Repolarizing	12-18
King Pin Bushings	3-13	Specifications	12-52
Lower Control Arm	3-11	Turning Commutator	12-13
Lower Pivot Pin and Bushing	3-9	Handicap Control	14-16
Springs, Front	3-10	Harmonic Balancer Replacement	6-16
Stabilizer, Front	3-14	Headlamp, Aiming	12-40
Upper Control Arm	3-12	Heater and Defroster, Underseat	14-13
Upper Pivot and Eccentric	3-8	Horn	12-39
Special Tools	3-20	Check and Adjust	12-44
Specifications	3-19	Circuit Description	12-39
Front Wheel Bearing Adjustment	3-5	Diagnosis and Testing	12-45
Fuel Gauge	12-47	Horn Relay	12-39
Replace Instrument Panel Unit	12-48	Hydraulic Brake System, Flushing	5-6
Replace Tank Unit	12-49	Hydraulic Valve Lifter, Replace	6-14
Testing	12-51	Hydraulic Valve Lifter Service	6-30
Trouble Diagnosis	12-50	Ignition	12-28
Fuel Pump		Adjust Timing	12-31
Assembly	6B-56	Circuit Description	12-28
Description	6B-53	Distributor Assembly	12-36
Diagnosis and Testing	6B-59	Disassembly	12-34
Disassembly	6B-55	Installation	12-36
Overhaul	6B-55	Removal	12-33
Fuel Pump, Eccentric, Replace	6-16	Minor Repairs	12-32
Fuel Tank	8-1	Specifications	12-52
Description	8-1	Ignition Lock, Replace	12-33
Diagnosis and Testing	8-2	Installation, Engine	6-47
Replacement	8-2	Instruments	12-47
Specifications	8-3	Replace Instruments	12-48
Fuses	12-39	Replace Speedometer Cable	12-49
Gasoline Gauge	12-47	Trouble Diagnosis and Testing	12-49
Replace Instrument Panel Unit	12-48	Insulators (Motor Mounts), Replace	6-15
Replace Tank Unit	12-49	Intake Manifold or Gasket, Replace	6-9
Testing	12-51	Intake Valve Stem Seal or Shield, Replace	6-11
Trouble Diagnosis	12-50	King Pin Bushing Replacement	3-13
General Specifications	00-4		
Generator	12-5		
Assembly	12-17		
Circuit Description	12-4		
Cleaning and Inspection	12-14		
Cleaning Commutator	12-21		
Diagnosis and Testing	12-21		
Disassembly	12-14		

SUBJECT	PAGE	SUBJECT	PAGE
Leakdown Rate, Valve Lifter Test	6-32	Manifold Heat Control Valve	6B-1
Light Circuit	12-39	Model Information	00-2
Fuses	12-39	Oil Filter	6A-3
Headlamp Aiming	12-40	Cleaning	6A-7
Headlamp Replacement	12-43	Oil Pan and Gasket Replacement	6-20
Switch Replacement	12-44	Oil Pump	6A-3
Tail Lamp Replacement	12-39	Overhaul	6A-9
Trouble Diagnosis and Testing	12-45	Remove	6A-8
Lower Control Arm and Shaft Replacement	3-11	Replace	6A-8
Lower Pivot Pin and Bushing Replacement	3-9	Oiling System, Engine	6A-3
Lubrication	0-1	Description	6A-3
Body	0-6	Minor Repair	6A-8
Brake Cables	0-4	Overhaul, Oil Pump	6A-9
Carburetor	0-4	Periodic Service, Oil Filter	6A-7
Carburetor Air Cleaner	0-5	Specifications	6A-11
Chassis	0-2	Parking Brake Adjustment	5-5
Clutch Release Bearing	0-3	Pilot Bearing, Clutch	6-23
Crankcase Ventilator	0-5	Pinion and Ring Gear	
Distributor	0-3	Tooth Contact Information	4-8
Engine	0-1	Tooth Contact Test	4-11
Front Wheel Bearings	0-4	Pinion Bearing Oil Seal Replacement	4-4
Gearshift Controls	0-4	Piston Pin Replacement	6-40
Generator	0-3	Piston Replacement	6-37
Manifold Heat Valve	0-5	Piston Ring Installation	6-41
Master Cylinder, Brake	0-5	Power Steering Gear	See Steering Gear
Rear Axle	0-3	Propeller Shaft	4-23
Rear Springs	0-3	Assembly	4-25
Rubber Bushings	0-5	Cleaning and Inspection	4-25
Shock Absorbers	0-4	Diagnosis and Testing	4-26
Speedometer Drive Cable	0-4	Disassembly	4-23
Starting Motor	0-3	Installation	4-25
Steering Gear	0-3	Period Service	4-23
Transmission		Removal	4-23
Hydra-Matic	0-3	Push Rod Cover or Gasket, Replace	6-11
Synchro-Mesh	0-3	Radiator, Replacement	6A-9
Universal Joints	0-5	Radio	14-1
Water Pump	0-2		
Lubrication Chart	0-0		
Lubrication System, Engine	6A-3		
Description	6A-3		
Minor Repair	6A-8		
Overhaul, Oil Pump	6A-9		
Periodic Service, Oil Filter	6A-7		
Specifications	6A-11		
Main Bearing Replacement, Engine	6-43		

SUBJECT	PAGE	SUBJECT	PAGE
Rear Axle Shaft		Sheet Metal Replacement	11-2
Replace		Battery Support Replacement	11-2
Axle Shaft	4-5	Bumper and Grille Assembly—	
Axle Shaft Bearing	4-5	Remove and Replace	11-2
Axle Shaft Oil Seal	4-5	Front Fender—Remove and Replace	11-2
Rear Main Bearing Oil Seal, Replace	6-21	Hood Hinge—Remove and Replace	11-2
Rear Shock Absorber		Hood Replacement	11-2
Description	4-26	Hood Hinge Spring Replacement	11-2
Minor Repairs	4-26	Shift Linkage	
Periodic Service	4-26	Adjust	7-2
Replacement	4-30	Replace	7-4
Rear Spring		Solenoid, Starting Motor	12-24
Description	4-26	Testing, See Starting Motor	
Installation	4-29	Spark Plug	12-30
Minor Repair	4-26	Cleaning and Adjustment	12-32
Periodic Service	4-26	Description	12-24
Removal	4-29	Specifications	12-52
Specifications	4-30	Special Tools	
Regulator, Voltage and Current	12-8	Brakes	5-48
Adjustment	12-18	Engine	
Installation	12-21	Mechanical	6-52
Removal	12-18	Cooling and Lubrication	6A-11
Specifications	12-52	Clutch	6C-5
Trouble Diagnosis and Testing	12-21	Front Suspension	3-20
Reline Brakes	5-6	Rear Suspension	4-31
Removal, Engine	6-24	Steering	9-39
Ring Gear and Pinion Set,		Transmission	7-16
Remove and Replace	4-20	Specifications	
Rochester Carburetor 2GC (2 Jet)	6B-2	Brakes	
Rochester Carburetor 4GC (4 Jet)	6B-16	Power	5-28 & 5-48
Rocker Arm Stud, Replace	6-13	Standard	5-12
Serial Number and Body Number	1-1	Electrical	12-52
Sheet Metal, Chassis	11-0	Engine	
Adjustments	11-1	Clutch	6C-5
Bumper Lower Impact Bar	11-2	Cooling	6A-11
Fenders	11-1	Mechanical	6-51
Hood	11-1	Front Suspension	3-19
Radiator Support and		General	00-4
Front End Sheet Metal	11-1	Rear End Suspension	4-32
Description	11-1	Steering	
Hood Hinges	11-1	Power	9-38
Hood Latches	11-1	Standard	9-9
Front Bumper	11-1	Transmission	7-15
		Wheels and Tires	10-7
		Speedometer Cable, Replace	12-49

SUBJECT	PAGE	SUBJECT	PAGE
Starting Motor	12-21	Timing Chain Cover or Gasket, Replace	6-16
Assembly	12-26	Timing Chain Replacement	6-19
Circuit Description	12-21	Timing Sprocket Oil Seal, Replace	6-17
Cleaning and Inspection	12-24		
Cleaning Commutator	12-24	Tires	
Diagnosis and Testing	12-28	Description	10-1
Disassembly	12-23	Diagnosis and Testing	10-6
Installation	12-27	Balancing	10-6
Lubrication	0-3	Noise	10-6
Specifications	12-52	Tread Wear	10-6
Starting Motor Switch	12-29	Inspection	10-4
Replace	12-33	Misalignment	10-5
Steering Gear, Power	9-10	Overinflation	10-4
Adjustment	9-13	Side Wear	10-5
Description	9-10	Underinflation	10-4
Diagnosis and Testing	9-36	Minor Repair	10-3
Gear		Removal from Wheel	10-3
Installation in Car	9-27	Replace on Wheel	10-3
Overhaul	9-14	Periodic Service	10-1
Removal	9-13	Inflation	10-1
Periodic Service	9-13	Rotation	10-2
Pump		Specifications	10-7
Description	9-29	Torque Specifications	
Installation	9-36	Engine	6-51
Removal	9-31	Transmission and Gearshift Control	
Trouble Diagnosis and Testing	9-36	Adjustment of Shift Lever	7-2
Special Tools	9-39	Assembly	7-12
Specifications	9-38	Description	7-1
Steering Gear, Special Tools	9-39	Diagnosis and Testing	7-14
Steering Gear, Standard		Disassembly	7-6
Adjustment on Car	9-1	Installation	7-16
Assembly	9-7	Periodic Service	7-2
Cleaning and Inspection	9-5	Power Flow	7-1
Description	9-1	Removal	7-5
Diagnosis and Testing	9-9	Repairs	7-11
Disassembly	9-5	Replace Linkage	7-4
Installation	9-8	Replace Rear Bearing Oil Seal	7-2
Periodic Service	9-1	Special Tools	7-16
Removal	9-4	Specifications	7-15
Replace		Trouble Diagnosis and Testing	
Steering Linkage	9-3	Brakes	
Steering Wheel	9-3	Power	5-27 & 5-47
Specifications	9-9	Standard	5-8
Temperature Gauge	12-47	Electrical	
Diagnosis	12-50	Battery and Generator Circuit	12-21
Testing	12-51	Ignition Circuit	12-37
Thermostat Replacement	6A-8	Instrument	12-50
		Lighting and Horn Circuit	12-45
		Starting Circuit	12-28

SUBJECT	PAGE	SUBJECT	PAGE
Engine		Vacuum Pump Diagnosis and Testing	6B-59
Cooling	6A-10	Valve Lifter Leakdown Rate, Test	6-32
Fuel		Valve Lifter—Oversize	6-35
Carburetor		Valve Lifter Service	6-30
AFB (Four Barrel)	6B-51	Valves and Seats—Recondition	6-28
Rochester 2GC (2 Jet)	6B-14	Valve Timing	6-19
4GC (4 Jet)	6B-34	Valves and Cylinder Head, Overhaul	6-26
Fuel and Vacuum Pump	6B-59	Washer, Windshield	14-6
Front Suspension	3-14	Water Pump Replacement	6A-9
Rear End Suspension		Wheels and Tires	10-1
Differential	4-21	Wiring Diagrams	12-2
Propeller Shaft	4-26		
Steering			
Power	9-36		
Standard	9-9		
Transmission	7-14		
Wheels and Tires	10-6		
Tune-N-Test	15-1		
Upper Control Arm and Shaft Replacement	3-12		
Upper Pivot Pin and Eccentric Bushing Replacement	3-8		