

YEAR	MODEL	PART NAME	Per Car	Part No.	
Group 5.001 SUPPORT ASSEMBLY, FRONT BRAKE					
1939-41	All	2	502329	
1942-48	All R.H.	1	509213	
1942-48	All L.H.	1	509214	
1949-54	All R.H.	1	513035	
1949-54	All L.H.	1	513036	
1955-56	All	2	5454513	
SUPPORT ASSEMBLY, rear brake					
1939-41	All R.H.	1	509278	
1939-41	All L.H.	1	509279	
1942-48	All R.H.	1	509218	
1942-48	All L.H.	1	509216	
1949-56	All R.H.	1	509278	
1949-56	All L.H.	1	509279	
Group 5.002 BOLT, FRONT BRAKE SUPPORT TO KNUCKLE					
1937-56	All	wheel stop.....	2	502322	
1939-56	All (Hex. 1/16"-20x2 3/8")	6	502321	
1939-48	All	NUT , support to knuckle bolt..... (Hex. 1/16"-20)	4	120370	(8.915)
1937-56	All	SPACER , front brake support to knuckle.....	4	556941	
Group 5.017 SHOE AND LINING PACKAGE, BRAKE (For Two Wheels)					
NOTE: Consists of 2 primary and 2 secondary shoe and lining assemblies.					
1939-41	All Front or rear	2	514475	
1942-48	All Front	1	516552	
1942-54	All Rear	1	514476	
1949-54	All Front	1	514472	
1955-56	All Front	1	519983	
1955-56	All Rear	1	520887	
1941	All	.030 O.S. Front or rear	1	516535	
1942-48	All	.030 O.S. Front	1	516557	
1942-54	All	.030 O.S. Rear	1	516535	
1949-54	All	.030 O.S. Front	1	516530	
1955-56	All	.030 O.S. Front	1	519988	
1955-56	All	.030 O.S. Rear	1	520891	
Group 5.018 BRAKE LINING PACKAGE, HALF SET (For Two Wheels)					
1939-41	All Front or rear	2	516543	
1942-54	All Rear	1	516543	
1942-48	All Front	1	516562	
1949-54	All Front	1	516540	
1955-56	All Front	1	519993	
1955-56	All Rear	1	520889	
1941	All	.030 O.S. Front or rear	1	516549	
1942-48	All	.030 O.S. Front	1	516565	
1942-54	All	.030 O.S. Rear	1	516549	
1949-54	All	.030 O.S. Front	1	516546	
1955-56	All	.030 O.S. Front	1	519996	
1955-56	All	.030 O.S. Rear	1	520894	
Group 5.019 RIVET, BRAKE SHOE LINING					
1934-48	All	80	413901	
Group 5.022 GASKET, REAR BRAKE TO AXLE HOUSING					
1937-56	All	2	231888	
Group 5.024 BOLT, REAR BRAKE PLATE TO AXLE HOUSING					
1937-56	All (Spec. 3/8"-24x1")	8	414999	
Group 5.026 SPRING, BRAKE SHOE					
1934-56	All	adjusting screw.....	4	3707417	
1935-38	All	anchor pin to shoe.....	8	497834	
1937-38	All			
1942-48	All	secondary—red.....	4	1415663	
1939-54	All	shoe to anchor—green..... Front	4	508126	
1939-51	All	shoe to anchor—green..... Rear	4	508126	
1951-56	All	shoe to anchor—gray..... Rear	4	3694822	
1955-56	All	shoe to anchor..... Front	4	497834	
Group 5.030 LOCK					
		see Group 4.246 for use.....		475508	

5.041-5.151

Group 5.041		PIN, BRAKE SHOE HOLD-DOWN SPRING			
1935-41	All		Front	4	5300962
1942-48	All		Front	4	412685
1949-54	All		Front	4	512132
1935-56	All		Rear	4	5300962
1955-56	All		Front	4	1293908
Group 5.042		CUP, BRAKE SHOE HOLD-DOWN SPRING			
1934-56	All			8	493997
Group 5.043		SPRING, BRAKE SHOE HOLD-DOWN			
1934-56	All			8	231186
1935-41	All	SPRING PACKAGE, for 1 wheel	Front	2	510329
1935-56	All		Rear	2	510329
1942-48	All		Front	2	510330
1949-54	All		Front	2	513399
Group 5.045		GUIDE, BRAKE SHOE ANCHOR PIN			
1935-56	All			4	497812
Group 5.050		ECCENTRIC, BRAKE SHOE			
1935-38, 1942-48	All			4	497811
Group 5.053		SPACER, BRAKE SHOE ECCENTRIC			
1935-38, 1942-48	All		Front or rear	4	497831
Group 5.055		PIN, BRAKE SHOE ANCHOR			
1935-56	All	with guide		4	502926
Group 5.056		WASHER, BRAKE SHOE ANCHOR PIN			
1934-56	All		($\frac{5}{8}$ " heavy)	4	494177
Group 5.057		NUT, BRAKE SHOE ANCHOR PIN			
1935-48	All		Front ($\frac{5}{8}$ "-18)	2	122021
1935-54	All		Rear ($\frac{5}{8}$ "-18)	2	122021
1949-56	All		Front	2	553746
Group 5.110		SCREW, BRAKE SHOE ADJUSTING			
1935-56	All			4	496351
Group 5.111		NUT, BRAKE SHOE ADJUSTING SCREW			
1935-41	All		Front	2	509235
1935-56	All		Rear	2	509235
1942-56	All		Front	2	509208
1935-41	All	SOCKET, brake shoe adjusting screw	Front	2	509234
1935-56	All		Rear	2	509234
1942-56	All		Front	2	509209
Group 5.117		COVER, BRAKE ADJUSTER HOLE			
1932-56	All	rubber plug			503630
Group 5.149		LEVER, HAND BRAKE ACTUATING			
1939-56	All		Rear R.H.	1	509210
1939-56	All		Rear L.H.	1	509211
Group 5.150		STRUT, REAR BRAKE LEVER TO SHOE			
1939-56	All			2	553738
Group 5.151		SPRING, REAR BRAKE			
1939-56	All			2	502327

(8.915)
(8.915)

Group 5.158		PIVOT, HAND BRAKE ACTUATING LEVER			
1935-56	All	2	502305	
1937-56	All	WASHER, hand brake lever pivot spring.....	2	1300540	
Group 5.387		HOUSING ASSY., REAR AXLE			
1941-48	All	1	505121	
1949	All	1	511248	
1950-54	All	1	513615	
1955	All	1	518929	
1956	All	1	521667	
1937-56	All	CAP, axle breather screw.....	1	498373	(4.687)
1937-56	All	SCREW, axle breather and hose connector.....	1	231915	(4.687)
Group 5.394		RETAINER, REAR SPRING BUMPER			
1937-53	All exc. 1940 29	2	502257	
1954	All	2	517532	
1955-56	All	2	520875	
1955-56	25/2711-19-37-39 All	BRACKET, differential carrier bumper—on floor pan	1	519256	
1955-56	25/2762 63-64 All	1	519257	
1955-56	28 All	1	519258	
1955-56	All	BUMPER, differential carrier.....	1	519088	
Group 5.395		BUMPER, REAR SPRING AXLE			
1939-54	All	w/retainer.....	2	520881	■
1955-56	All	2	520874	
Group 5.399		GASKET, REAR AXLE HOUSING COVER			
1937-40	All	1	231961	
Group 5.400		PLUG, REAR AXLE HOUSING FILLER			
1937-49	All	1	1330801	
1949-56	All	used on cars with filler plug in diff. carrier.....	1	444788	
Group 5.401		GASKET, AXLE HOUSING FILLER PLUG			
1937-49	All(Rd. closed $\frac{3}{4}$ " I.D.)	1	113897	(8.955)
Group 5.420		SHAFT, REAR AXLE			
NOTE: Use 1-412111 Group 5.822 and 1-502070 Group 5.816 on 1937-38.					
1937-40	All(30 $\frac{1}{2}$ " long) R.H.	1	502063	
1937-40	All(30 $\frac{1}{2}$ " long) L.H.	1	502064	
1941-48	All(30 $\frac{3}{4}$ " long) R.H.	1	505118	
1941-48	All(30 $\frac{3}{4}$ " long) L.H.	1	505119	
1949-56	All(30 $\frac{1}{2}$ " long) R.H.	1	502063	
1949-56	All(30 $\frac{1}{2}$ " long) L.H.	1	502064	
Group 5.424		BRACKET, REAR WHEEL STATIC COLLECTOR			
1937-55	All	2	231895	
1937-55	All	BRUSH, rear wheel static collector.....	2	1862394	
1937-55	All	SPRING, rear wheel static collector.....	2	231896	
Group 5.447		BEARING, DIFFERENTIAL PINION FRONT			
1937-47	All	ball type.....	1	954780	
1947-56	All	roller type.....	1	188963	
Group 5.452		SCREW, FRONT PINION BEARING LOCK			
1933-47	All	with ball type pinion bearing.....	3	358073	
Group 5.453		SLEEVE, PINION BEARING LOCK			
1937-47	All	with ball type pinion bearing..... Front	1	499532	
1947-56	All	SPACER, rear axle drive pinion bearing—with roller type pinion bearing..... Front	1	510424	
1947-56	All	with roller type pinion bearing..... Rear	1	510425	

Group 5.460 SHIM, PINION BEARING ADJUSTING

1937-47	All	with ball type pinion bearing, front	AR	499528
1937-47	All	with ball type pinion bearing, front (.015" copper)	AR	499529
1937-47	All	with ball type pinion bearing, front (.018" plain)	AR	499530
1939-47	All	with ball type pinion bearing, front (.014" blued)	AR	503063
1947-56	All	with roller type pinion bearing (.002" plain)	AR	509263
1947-56	All	with roller type pinion bearing (.003" blued)	AR	509264
1947-56	All	with roller type pinion bearing (.004" copper)	AR	509265
1947-56	All	with roller type pinion bearing (.005" plain)	AR	509266
1947-56	All	with roller type pinion bearing (.010" plain)	AR	509267

Group 5.468 SHIELD, FRONT PINION BEARING SPLASH

1937-47	All	with ball type pinion bearing	1	499519
1947-55	All	with roller type pinion bearing	1	506929
1956	All		1	522131

Group 5.469 SEAL, FRONT PINION BEARING OIL

1937-47	All	with ball type pinion bearing	1	501839
1947-56	All	with roller type pinion bearing	1	506938

Group 5.484 BEARING, DIFFERENTIAL PINION REAR

1937-47	All	ball type	1	107391
1947-56	All	roller type	1	188960

Group 5.489 RING, DIFFERENTIAL REAR PINION BEARING LOCK

1935-47	All	except 44-9 axle on 1935-36 with N.D. bearing axle	1	377722
---------	-----	--	-------	---	--------

Group 5.504 CARRIER ASSEMBLY, DIFFERENTIAL

1939-48	All	39-10 ratio (3.90-1)	1	513351
1939-48	All	41-10 ratio (4.10-1)	1	513349
1939-48	All	43-10 ratio (4.30-1)	1	513350
1939-48	All	41-9 ratio (4.55-1)	1	513352
1948	All	40-11 ratio (3.63-1)	1	513353
1949-54	All	41-10 ratio (4.10-1)	1	513358
1949-54	All	40-11 ratio (3.63-1)	1	513361
1949-54	All	39-10 ratio (3.90-1)	1	513359
1949-54	All	43-10 ratio (4.30-1)	1	513567
1952-54	All H.T.	40-13 ratio (3.07-1)	1	516599
1953-54	All H.T.	41-12 ratio (3.42-1)	1	517841
1954	All H.T.	42-13 ratio (3.23-1)	1	518566
1953	All P.G.	40-11 ratio (3.63-1)	1	518638
1955	All S.T.	39-10 ratio (3.90-1)	1	520936
1955	All S.T.	40-11 ratio (3.63-1)	1	520937
1955	All H.T.	40-13 ratio (3.07-1)	1	520938
1955	All H.T.	42-13 ratio (3.23-1)	1	520939
1956	All S.T.	39-10 ratio (3.90-1)	1	522207
1956	All S.T.	40-11 ratio (3.63-1)	1	522208
1956	All H.T.	40-13 ratio (3.07-1)	1	522209
1956	All H.T.	42-13 ratio (3.23-1)	1	522210

Group 5.505 CARRIER AND CAP, DIFFERENTIAL

1939-47	All	with ball type pinion bearing	1	501825
1947-54	All	use w/513671 pkg. Group 5.506 on 1947-48	1	515458
1955-56	All		1	520761
1947	All	PLUG , oil hole—with roller type pinion bearing (31/64" dia.)	1	506926
1947-56	All	 (31/64" dia.)	1	510712

Group 5.506 BOLT, DIFFERENTIAL CARRIER TO HOUSING

1937-48	All	 (Hex. 3/8"-24x7/8")	10	454921	(8.900)
1949-56	All	 (Hex. 3/16"-20x1")	AR	512389	
1955-56	All	 (Hex. 3/16"x1 5/8")	2	518243	
1939-48	All	BOLT AND WASHER PKG. , carrier to housing (see note)	1	513671	
1947-56	All	BOLT , differential bearing cap	4	499515	(0.056)

NOTE: This package consists of 10 special bolts and lock washers to be used when 515458 carrier and cap is installed on 1947-48 models.

Group 5.508 GASKET, DIFFERENTIAL CARRIER TO HOUSING

1937-48	All		1	501958
1949-56	All		1	512390

Group 5.510		CASE, DIFFERENTIAL			
1937-38	All.....			1	499508
1939-85	All.....	exc. 40-13, 41-12 and 42-13 ratio.....		1	501828
1952-85	All.....	use w/40-13, 41-12 and 42-13 ratio.....		1	503479
1956	All.....	exc. 40-13, 41-12 and 42-13 ratio.....		1	522135
1956	All H.T.....	use w/40-13, 41-12 and 42-13 ratio.....		1	522136
Group 5.517		SHAFT, DIFFERENTIAL PINION			
1939-56	All.....			1	501833
Group 5.518		PIN—SCREW, DIFFERENTIAL PINION SHAFT LOCK			
1956	All.....	PIN		1	521658
1933-85	All.....	SCREW		1	472546
Group 5.527		GEAR PACKAGE, DIFFERENTIAL			
1937-56	All.....	consists of 2 side gears and 2 pinion gears.....		1	509520
Group 5.529		RING GEAR AND PINION, DIFFERENTIAL			
NOTE: When changing gear ratio see Group 4.337 for proper speedometer gear.					
1937-38	All.....	35-8 ratio (4.37-1), Std.....		1	492198
1939-47	All.....	39-10 ratio (3.90-1), with ball type pinion bearing.....		1	513459
1939-47	All.....	41-10 ratio (4.10-1), with ball type pinion bearing.....		1	513458
1939-47	All.....	43-10 ratio (4.30-1), with ball type pinion bearing.....		1	513457
1939-47	All.....	41-9 ratio (4.55-1), with ball type pinion bearing.....		1	513456
1947-56	All.....	39-10 ratio (3.90-1), with roller type pinion bearing.....		1	516699
1947-54	All.....	41-10 ratio (4.10-1), with roller type pinion bearing.....		1	513462
1947-54	All.....	43-10 ratio (4.30-1), with roller type pinion bearing.....		1	513461
1948-56	All.....	40-11 ratio (3.63-1).....		1	516700
1952-54	All H.T.....	40-13 ratio (3.07-1).....		1	516701
1953-54	All H.T.....	41-12 ratio (3.42-1).....		1	516698
1954	All H.T.....	42-13 ratio (3.23-1).....		1	518565
1955-56	All H.T.....	42-13 ratio (3.23-1).....		1	521423
1955-56	All H.T.....	40-13 ratio (3.07-1).....		1	522144
Group 5.531		BOLT, RING GEAR TO CASE			
1937-56	All.....	exc. 40-13, 41-12 and 42-13 ratio axle.....		12	517082
1952-56	All.....	w/40-13, 41-12 and 42-13 ratio axle.....		12	517083
Group 5.535		LUBRICANT, REAR AXLE GEAR			
1939-56	All.....		(2 qt. can)	AR	513379
Group 5.536		BEARING, DIFFERENTIAL SIDE			
1937-56	All.....			2	179243
Group 5.537		NUT, DIFFERENTIAL SIDE BEARING ADJUSTING			
1939-56	All.....			2	515535
Group 5.539		LOCK, DIFFERENTIAL SIDE BEARING ADJUSTING NUT			
1939-56	All.....			2	501806
1933-54	All.....	BOLT , adjusting nut lock..... (Hex. $\frac{5}{16}$ "-18x $\frac{5}{8}$ ")		2	180075 (8.900)
Group 5.542		WASHER, DIFFERENTIAL PINION THRUST			
1937-56	All.....			2	513714
Group 5.543		WASHER, DIFFERENTIAL SIDE GEAR THRUST			
1937-56	All.....			2	513713

Group 5.544 SHAFT, PROPELLER

1937-38	All	Rear (40 $\frac{3}{8}$ " C to C of holes)	1	500026
1941-48	25 S.T.	green color band	1	506065
1941-48	24-26 S.T.	yellow color band	1	506067
1941-48	27 S.T.	red color band	1	506066
1941-48	28-29 S.T.	blue color band	1	506068
1948	25 H.T.	Saginaw type	1	510781
1948	26 H.T.	Saginaw type	1	510782
1949-52	All	Saginaw type	1	511291
1953-54	25-H.T. & S.T.	Saginaw type	1	515502
1953	All P.G.		1	518481
1954	28 H.T.	Saginaw type	1	517527
1954	28 S.T.		1	5667452
1955	25 All		1	5667470
1955	28 All		1	5667475
1956	27 All		1	5670041
1956	28 All		1	5670042

Group 5.545 FLANGE, REAR UNIVERSAL JOINT

1937-40	All exc. 1940 2nd type		1	501777
1940-47	All exc. 1940 1st type	daubed with red paint, with ball type pinion bearing	1	504740
1947-55	All H.T. & S.T.	with roller type pinion bearing	1	506927
1953	All P.G.		1	518500
1956	All		1	522078
1937-38	All	RING , front propeller shaft snap	1	500798
1937-38	All	WASHER , front propeller shaft to universal joint	1	500797

Group 5.546 BOLT, PROPELLER SHAFT TO REAR COMPANION FLANGE

1937-55	All H.T. & S.T.		AR	505653
---------	-----------------	--	----	--------

Group 5.548 REPAIR KIT, UNIVERSAL JOINT

1937-38	All		Front or rear	1-2	516406
1939-55	All H.T. & S.T.	exc. 1940 w/mechanics type prop. shaft	Front	1	516405
1939-55	All H.T. & S.T.	exc. 1940 w/mechanics type prop. shaft	Rear	1	516406
1940	All with Mechanics		Front or rear	1-2	509295
1953	All P.G.		Front or rear	2	518648
1956	All		Front or rear	2	522163

Group 5.549 SPACER, REAR UNIVERSAL JOINT FLANGE

1937-47	All	with N.D. bearing axle		1	499551
---------	-----	------------------------	--	---	--------

Group 5.550 PACKING, FRONT PROPELLER SHAFT

1937-38	All		Felt	2	499915
1937-38	All	SEAL , front propeller shaft	Leather	1	500485

Group 5.551 WASHER, FRONT PROPELLER SHAFT PACKING RETAINER

1937-38	All			1	499919
---------	-----	--	--	---	--------

Group 5.555 YOKE, FRONT UNIVERSAL JOINT

1937-38	All	flange type		1	499922
1953	All P.G.			1	3706135
1939-51	All	YOKE PACKAGE , front universal joint, with bearings, cork washers and attaching parts		1	506414
1952-54	All H.T. & S.T.	front universal joint		1	516601
1955	All S.T.			1	519976
1955	All H.T.			1	519977
1956	All S.T.			1	5670047
1956	All H.T.			1	5670049
1937-38	All	COUPLING AND GEAR , front propeller shaft splined		1	500027

Group 5.556 SHIELD, TRANS. REAR BEARING SPLASH

1939	26			1	502239	(4.335)
1939-54	All exc. 1939-36			1	509500	(4.335)

Group 5.557 PLUG, FRONT UNIVERSAL JOINT DUST

1939-40	All		(Cup type)	1	502237
1941-55	All H.T. & S.T.	with Saginaw yoke	(Cup type)	1	502237
1941-48	All	with Mechanics yoke	(Cup type)	1	506538
1956	All S.T.		(Cup type)	1	502237
1956	All H.T.		(Cup type)	1	5670044

Group 5.560		WASHER, UNIVERSAL JOINT			
1937-51	All	cork	8	406813	
1952-55	All H.T. & S.T.	cork	8	5663699	
1956	All	cork	8	1406101	
1937-55	All H.T. & S.T.	SHIELD , universal joint journal dust	8	406805	
1956	All		8	1406099	
1937-38	All	GASKET , front propeller shaft housing	1	499920	
1953	All P.G.	RETAINER , universal joint brg. gasket	8	403906	
Group 5.566		BEARING, UNIVERSAL JOINT			
1937-51	All	round	AR	514270	
1952-55	All H.T. & S.T.	round	6	5664303	
1937-51	All	trunnion, flanged type	Rear 2-4	406829	
1940	All	trunnion, with Mechanic's joint	Front 2-4	406829	
1952-55	All H.T. & S.T.	flanged type	Rear 2	5663696	
1953	All P.G.		8	2223720	
1956	All		8	5662717	
Group 5.578		JOURNAL ASSY., UNIVERSAL JOINT			
1937-51	All		2	406803	
1952-55	All H.T. & S.T.		2	5663692	
1953	All P.G.		2	518555	
1956	All		2	5662652	
Group 5.586		PLATE, UNIVERSAL JOINT BEARING RETAINER			
1937-53	All H.T. & S.T.	Saginaw	AR	514393	
1954-55	All		AR	1418081	
1937-55	All H.T. & S.T.	flange bolt lock—with Saginaw yoke	2-4	406822	
1956	All	flange bolt lock	2	5670765	
1937-55	All H.T. & S.T.	BOLT , universal joint round bearing lock	AR	406808	
1937-55	All H.T. & S.T.	LOCK , universal joint round bearing bolt, with Saginaw yoke	AR	1418080	
1941-55	All H.T. & S.T.	RING , universal joint bearing retainer, with Mechanics' joint	6	506034	
1956	All	universal joint bearing snap	8	1456507	
1953	All P.G.	RETAINER , universal joint bearing	6	3721887	
1953	All P.G.	U-BOLT , universal joint to rear companion flange	2	2118319	
1956	All		2	522380	
Group 5.595		NUT, UNIVERSAL JOINT FLANGE TO PINION			
1937-47	All	with ball type pinion bearing	1	499562	
1947-56	All	with roller type pinion bearing—use with 513716	1	513715	
1947-56	All	WASHER , drive pinion nut—use with 513715	1	513716	
Group 5.603		WHEEL, FRONT OR REAR			
1939-48	All		5	508847	
1949-55	All		5	519137	
1956	All		5	521551	
Group 5.609		DRUM, REAR WHEEL BRAKE			
1937-38	All		2	499775	
1939-56	All	use in sets only—optional with 409176, Kelsey-Hayes	2	505300	
1939-56	All	use in sets only—optional with 505300, Motor Wheel	2	409176	
Group 5.810		SPRING PKG., BRAKE DRUM SILENCER			
1950-54	All	consists of 6 retainers & 2 springs—for 2 wheels	2	514278	
Group 5.811		GASKET, REAR BRAKE DRUM TO AXLE SHAFT			
1937-56	All	($\frac{1}{32}$ " thick)	AR	499930	
Group 5.812		BOLT, WHEEL TO HUB			
1937-56	All	R.H. thread	Rear 5	499542	
1937-56	All	L.H. thread	Rear 5	499543	
1934-56	All	BOLT , brake drum to axle shaft	4	501503	
1937-55	All	WASHER , rear brake drum bolt ($\frac{3}{8}$ " light)	4	110730	(8.931)
Group 5.813		NUT, WHEEL HUB BOLT			
1937-56	All	L.H. thread	10	499550	
1937-56	All	R.H. thread	10	516637	

5.815-5.875

Group 5.815		DEFLECTOR, AXLE HOUSING OIL	
1937-56	All		2 499928
1937-56	All	DRAIN , rear brake oil	2 499929
Group 5.816		RETAINER, REAR WHEEL BEARING	
1937-38	All	to shaft	2 499545
1937-56	All	to housing	2 499932
1939-56	All	to shaft	2 567105
Group 5.819		GASKET, BRAKE DRUM OIL DEFLECTOR	
1937-56	All Rear	2 499933
Group 5.822		SEAL, REAR WHEEL BEARING OIL	
1937-38	All		2 232000
1939-54	All		2 412111
1955	All		2 1455257
1956	All		2 521665
1956	All	"O" ring type	2 521666
Group 5.842		WRENCH, WHEEL	
1937-56	All	and jack handle	1 521332
Group 5.855		BEARING ASSEMBLY, REAR WHEEL	
1937-55	All		2 954848
1956	All		2 954946
Group 5.858		CAP, WHEEL HUB OUTER	
1940	All		4 503581
1941-42	All		4 916486
1946	All		4 508607
1947-48	All		4 509418
1949-50	All	w/standard hub caps	4 511541
1951-54	All	w/standard hub caps	4 514588
1955-56	All	w/standard hub caps	4 518947
1953	All	CAP , simulated wire wheel hub	4 517702
1954	All		4 517897
1955-56	All		4 520247
1941-48	2507-19-69, 2609 All	CAP , spare wheel hub	1 506080
1953-56	All	COVER , simulated wire wheel	4 517701
Group 5.858		DISC ASSY., WHEEL (ACCESSORY)	
1948	All exc. sta. wag.	metal	5 510690
1949-50	All exc. 2561-62-71	metal	4 512583
1951	All exc. 2562-71	metal	4 514789
1952	All exc. 2562-71	metal	4 516496
1953	All exc. 2562	metal	4 516696
1954	All exc. 2562	metal	4 517869
1955	2511-19-37, 2819D-67 All		4 520941
1956	2564, 2819SD-37SD		4 519843
1956	All D exc. 62DF		4 521451
Group 5.864		CLIP, WHEEL HUB CAP RETAINING	
1939-56	All		15 521508
Group 5.871		PLUG, WHEEL	
1949-54	All	w/chrome wheel disc	20 514896
Group 5.875		EXTENSION, TIRE VALVE	
1949-50	All	w/chrome wheel disc	5 513410
1953-56	All	w/simulated wire wheels	5 513410
1955-56	All	VALVE ASSY. , tubeless tire	5 273232