

YEAR	MODEL	PART NAME	Per Car	Part No.
Group 13.090 WIRING HARNESS, BODY				
1949-50	2507 All L.H.D.	1	4563126
1949-50	2527-27B All	1	4563205
1949	2567	1	4562097
1950	2567	1	4582089
1950	2537 All	1	4579318
1949	2561 All	1	4571094
1949-52	2562 All	1	4571095
1949-52	2571 L.H.D.	1	4567697
1951-52	2507-11-27-27B-69 All	1	4610253
1951-52	2567	1	4610251
1951-52	2537 All	1	4610254
1953-54	2511-69 All L.H.D.	1	4627609
1953-54	2537 All L.H.D.	1	4627612
1953	2567 L.H.D.	1	4606093
1953-54	2562 All L.H.D.	1	4606784
1953	2571 L.H.D.	1	4606752
1954	2837	1	4632102
1954	2867	1	4632320
1954	2869 All	1	4632103
1955-56	25/2711 All L.H.D.	1	4653349
1955-56	25/2719 All L.H.D.	1	4653301
1955-56	25/2737 All L.H.D.	1	4653572
1955-56	25/2762 All	1	4653640
1955-56	25/2763F L.H.D.	1	4655527
1955-56	2564 DF	1	4665017
1955-56	2819 All L.H.D.	1	4653350
1955-56	2837 All L.H.D.	1	4653391
1955-56	2867	1	4678157
1956	2739 All L.H.D.	1	4673602
1956	2839 SD L.H.D.	1	4673456
1954	All	WIRING HARNESS, electric window control	1	4644683
1955	2511 All L.H.D.	1	4653487
1955	2519-62, 2819 All L.H.D.	1	4653311
1955	2537, 2837 All L.H.D.	1	4653573
1955	2563F L.H.D.	1	4655557
1955	2564 DF	1	4665422
1955	2867	1	4654266
1956	2719-62, 2819 All	1	4685574
1956	2737, 2837 All L.H.D.	window and seat control	1	4673050
1956	2739, 2839 All L.H.D.	window and seat control	1	4678224
1956	2764 DF	window control	1	4685575
1956	2867 L.H.D.	window and seat control	1	4672127
1956	All L.H.D.	seat adjuster control	1	4685375
1956	All L.H.D.	seat adjuster feed	1	4685376
1955-56	All exc. 25/2762-63-64	GROMMET, tail and backup lamp wires to w/house	2	2962158
Group 13.342 CLIP, BINDING END				
1949-56	2567, 2867	front and rear bow	4	4561686
Group 13.347 TRIM ASSY., FOLDING TOP COVER				
NOTE: When ordering trim assy. the color of the top or cover assy. must be specified.				
1942-47	2567	black top	1	4141436
1950	2567	black top—includes back curtain and glass	1	4174852
1951	2567	tan top—less back curtain	1	4183199
1951-52	2567	black top—less back curtain	1	4183200
1953-54	2567, 2867	tan top—less back curtain	1	4199922
1953-54	2567, 2867	black top—less back curtain	1	4199918
1953-54	2567, 2867	grey top—less back curtain	1	4199953
1953	2567	green top—less back curtain	1	4199919
1954	2867	green top—less back curtain	1	4208754
1955	2867	tan top	1	4216038
1955	2867	black top	1	4216039
1955	2867	grey top	1	4216037
1955	2867	green top	1	4216036
1955	2867	white top	1	4215044
1956	2867	black	1	4248811
1956	2867	green	1	4248812
1956	2867	blue	1	4246810
1956	2867	ivory	1	4246807
1956	2867	tan	1	4248813

Group 13.349 TRIM ASSEMBLY, FOLDING TOP SIDE ROOF RAIL INSIDE

1950-54	2567, 2867	black	R.H.	1	4197181
1950-54	2567, 2867	black	L.H.	1	4197182
1952-54	2567, 2867	green	R.H.	1	4208748
1952-54	2567, 2867	green	L.H.	1	4208749
1953-54	2567, 2867	grey top	R.H.	1	4197183
1953-54	2567, 2867	grey top	L.H.	1	4197184
1955	2867	grey top	R.H.	1	4216044
1955	2867	grey top	L.H.	1	4216045
1955	2867	green top	R.H.	1	4216046
1955	2867	green top	L.H.	1	4216047
1955-56	2867	black top	R.H.	1	4215052
1955-56	2867	black top	L.H.	1	4215053
1955	2867	tan top	R.H.	1	4215054
1955	2867	tan top	L.H.	1	4215055
1956	2867	green top	R.H.	1	4248817
1956	2867	green top	L.H.	1	4248818
1956	2867	tan top	R.H.	1	4248819
1956	2867	tan top	L.H.	1	4248820
1950-52	2567	TRIM AND PADDING PKG., grey top	Inside	1	4177830
1952	2567	green top	Inside	1	4190999
1955-56	2867	WELT, front roof rail inner—black		1	4241640
1955	2867	tan		1	4241641
1956	2867	green		1	4248825
1956	2867	blue		1	4248826
1956	2867	tan		1	4246835

Group 13.352 RETAINER, FOLDING TOP REAR QUARTER TRIM

1950-52	2567		R.H.	1	4606460
1950-52	2567		L.H.	1	4606461
1953	2567	1st type	R.H.	1	4622553
1953	2567	1st type	L.H.	1	4622554
1953-54	2567, 2867	2nd type	R.H.	1	4634720
1953-54	2567, 2867	2nd type	L.H.	1	4634721
1953-54	2567, 2867	BUSHING, at rear 1/4 trim retainer—1st type		4	4613556
1950-52	2567	PLATE, trim ret. adjusting		2	4581239
1950-52	2567	SPRING, rr. 1/4 trim retainer tension (rivets to trim ret.)		2	4150753
1950-52	2567	STRIP, rear 1/4 outer panel finishing—back of 1/4 window	R.H.	1	4586790
1950-52	2567		L.H.	1	4586791
1950-52	2567	SUPPORT, rr. 1/4 ret. guide plate	R.H.	1	4581237
1950-52	2567		L.H.	1	4581238
1953-54	2567, 2867	WEATHERSTRIP, folding top compt. side trim panel (3" long)	R.H.	1	4602985
1953-54	2567, 2867		L.H.	1	4602986
1955-56	2867		R.H.	1	4650300
1955-56	2867		L.H.	1	4650301

Group 13.353 SCREW, REAR QUARTER TRIM

1950-52	2567			2	4579251
---------	------	--	--	---	---------

Group 13.384 FASTENER, FOLDING TOP COVER

1941-50	2567	button	On dust boot	16	4565454
1941-48	2567	stud	Rivet type	AR	431822
1949-50	2567	stud	On quarter belt finishing mldg.	2	4564218
1941-49	2567	slide type	On side roof rail and quarter panel	AR	4571165
1941					
1949-50	2567	eyelet	In folding top trim (5/16"x3/16"—9/16" head)	6	445942
1949-50	2567	socket	On dust boot	16	105195
1949-50	2567		On dust boot	2	141967
1955-56	2867		On dust boot	24	105195
1955-56	2867		On seat back	1	4658414
1949-54	2567, 2867	stud	(8-32x1/4")	AR	454674
1949-50	2567		Trim stud—to side roof rail	6	105199
1952-54	2567, 2867	stud	On rear belt mldg. (No. 8—15x3/4")	AR	455448
1955-56	2867		On belt rail	18	4231676
1955-56	2867	button	On dust boot	24	4565454
1955-56	2867	stud	On inner quarter	6	455520

(8.987)

Group 13.389 CURTAIN, FOLDING TOP BACK (WITH WINDOW)

1950	2567	grey top	1	4177965
1951	2567	tan top	1	4183196
1951-52	2567	grey top	1	4183198
1953-54	2567, 2867	tan top	1	4197167
1953-54	2567, 2867	black top	1	4197168
1953-54	2567, 2867	green top	1	4208752
1953-54	2567, 2867	grey top	1	4197170
1955	2867	green top	1	4216040
1955	2867	black top	1	4216041
1955	2867	tan top	1	4216042
1955	2867	grey top	1	4216043
1955	2867	white	1	4215048
1956	2867	black top	1	4248814
1956	2867	green top	1	4248815
1956	2867	blue top	1	4246815
1956	2867	ivory top	1	4246812
1956	2867	tan	1	4248816

Group 13.392 ZIPPER, FOLDING TOP BACK CURTAIN

1949-50	2567	tan top	1	4569473
1949-50	2567	black top	1	4569474
1950	2567	grey top	1	4590257
1951-52	2567	black top	Lower	4597404
1951-52	2567	black top	Upper and sides	4597401
1951	2567	tan top	Upper and sides	4597400
1952	2567	tan top	Upper and sides	4609954
1953-54	2567, 2867	grey top	Upper and sides	4623965
1953-54	2567, 2867	black top	Upper and sides	4623964
1953-54	2567, 2867	tan top	Upper and sides	4623966
1953-54	2567, 2867	green top	Upper and sides	4623967
1955-56	2867	black top	1	4657084
1955	2867	grey top	1	4657100
1955-56	2867	tan top	1	4657113
1955-56	2867	green top	1	4657114
1956	2867	blue top	1	4657115

Group 13.393 FRAME, FOLDING TOP BACK CURTAIN GLASS

1941-50	2567	Outer	1	4567262
---------	------	-------	---	---------

Group 13.426 STRAP, FOLDING TOP HOLD DOWN

1940-54	2567, 2867		1	4615854
1955-56	2867		1	4631033

Group 13.429 LOOP, FOLDING TOP HOLD DOWN STRAP

1946-56	2567, 2867		1-2	4667402
---------	------------	--	-----	---------

Group 13.450 BOOT AND BAG, FOLDING TOP

1949	2567	black top	1	4171159
1950-52	2567	black top	1	4174860
1950-52	2567	grey top	1	4177966
1952	2567	green top	1	4191000
1953-54	2567, 2867	tan top	1	4210972
1953-54	2567, 2867	black top	1	4210973
1953-54	2567, 2867	green top	1	4210975
1953-54	2567, 2867	grey top	1	4210974
1954	2867	ivory	1	4209444
1955	2867	ivory	1	4215012
1956	2867	ivory	1	4246840
1942-56	2567, 2867	BAG , folding top boot	1	4174861

