

YEAR	MODEL	PART NAME	PART NO.	PER CAR	PART NO.
Group 13,090 WIRING HARNESS, BODY					
1949-52	2562 All			1	4571095
1951-52	2507-11-27-27B-69 All			1	4610253
1951-52	2567			1	4610251
1951-52	2537 All			1	4610254
1953-54	2511-69 All L,H,D.			1	4627609
1953-54	2537 All L,H,D.			1	4627612
1953	2567 L,H,D.			1	4627613
1953-54	2562 All L,H,D.			1	4606784
1953	2571 L,H,D.			1	4606752
1954	2837			1	4632102
1954	2867			1	4632320
1954	2869 All			1	4632103
1955-56	25/2711 All L,H,D.			1	4653349
1955-56	25/2719 All L,H,D.			1	4653301
1955-56	25/2737 All L,H,D.			1	4653572
1955-56	25/2762 All			1	4653640
1955-56	25/2763F L,H,D.			1	4655527
1955-56	25/2764 DF			1	4665017
1955-56	2819 All L,H,D.			1	4653350
1955-56	2837 All L,H,D.			1	4653391
1955-56	2867			1	4678157
1956	2739 All L,H,D.			1	4673602
1956	2839 SD L,H,D.			1	4673456
1957	2711 All L,H,D.			1	4699977
1957	2719 All L,H,D.			1	4701107
1957	2737 L,H,D.			1	4701108
1957	2737 D L,H,D.			1	4701084
1957	2739 L,H,D.			1	4701364
1957	2739 D L,H,D.			1	4702079
1957	2762 All L,H,D.			1	4702067
1957	2763 F L,H,D.			1	4702068
1957	2764 DF L,H,D.			1	4702069
1957	2819 D L,H,D.			1	4699991
1957	2819 SD			1	4712367
1957	2837 SD L,H,D.			1	4695925
1957	2839 SD L,H,D.			1	4701111
1957	2867 All			1	4696488
1958	2547 SD			1	4728907
1958	2567 All			1	4728908
1958	2731			1	4728909
1958	2739-41-49			1	4728910
1958	2793-94			1	4738180
1958	2793 D-93 SD			1	4738182
1958	2831 D			1	4728911
1958	2831 SD			1	4728912
1958	2839 D			1	4729199
1958	2839 SD			1	4729200
1958	2849 D			1	4729201
1958	2849 SD			1	4729202
1959	2111-19-37-39, 2411-19-39, 2837		Front	1	4765506
1959	2111-19-37-39-67		Rear	1	4762915
1959	2135		Front	1	4766304
1959	2135, 2735		Rear	1	4773865
1959	2145		Front	1	4773777
1959	2145		Rear	1	4773962
1959	2167, 2867		Front	1	4765575
1959	2411-19-39, 2837-39-67		Rear	1	4762916
1959	2735		Front	1	4766303
1959	2839		Front	1	4765574

1960	2111-19-37-39, 2337-39, 2411-19-39, 2837	Front	1	4790540
1960	2111-19-37-39, 2337-39	Rear	1	4791472
1960	2135	Front	1	4790532
1960	2135, 2735	Rear	1	4791014
1960	2145	Front	1	4790951
1960	2145	Rear	1	4791013
1960	2167, 2867	Front	1	4790542
1960	2167	Rear	1	4791473
1960	2411-19-39, 2837-39	Rear	1	4791474
1960	2735	Front	1	4790533
1960	2839	Front	1	4790541
1960	2867	Rear	1	4791475
1954	All	WIRING HARNESS, electric window control	1	4644683
1955	2511 All		1	4653487
1955	2519-62, 2819 All		1	4653311
1955	2537, 2837 All		1	4671606
1955	2563 F		1	4655557
1955	2564 DF		1	4665422
1955	2867		1	4671602
1955-56	All	window control-jumper	1	4712588
1956	2711	window control	1	4685573
1956	2719-62, 2819 All		1	4685574
1956	2737, 2837 All	window and seat control	1	4673050
1956	2739, 2839 All	window and seat control	1	4678224
1956	2763 F	window control	1	4685572
1956	2764 DF	window control	1	4685575
1956	2867	window and seat control	1	4672127
1956-57	All exc. 2762 SDF	seat adjuster control	1	4685375
1956	All	seat adjuster feed	1	4685376
1957	All exc. 2762 SDF, 2867 SD	seat adjuster feed	1	4710015
1957	2711 All	window and seat control	1	4702949
1957	2719-62, 2819 All	window and seat control	1	4702102
1957	2737, 2837 All	window and seat control	1	4702785
1957	2739, 2839 All	window and seat control	1	4708276
1957	2763 F	window and seat control	1	4710479
1957	2764DF	window and seat control	1	4705380
1957	2867 All	window and seat control	1	4702794
1957	2867 All	dome lamp feed and ground	1	4702066
1958	All	seat adjuster control	1	4740690
1958	All	seat adjuster feed	1	4733734
1958	25/2731-41-47-67, 2831 All	seat adjuster memory feed	1	4746273
1958	25/2731-41-47-67, 2831 All	seat adjuster memory control	1	4746271
1958	25/2731-41-47-67, 2831 All	seat adjuster memory seat back switch	1	4747945
1958	2739-49, 2839-49 All	seat adjuster memory feed	1	4746274
1958	2739-49, 2839-49 All	seat adjuster memory control	1	4746272
1958	2547 SD	window and seat control	1	4731761
1958	2567 All	window and seat control	1	4731762
1958	2731-41, 2831 All	window and seat control	1	4731758
1958	2739, 2839 All	window and seat control	1	4731759
1958	2749, 2849	window and seat control	1	4731760
1958	2793-94 All	window and seat control	1	4731763
1958	2567 All	dome lamp	1	4747947
1958	2731-41	dome lamp	1	4747953
1958	2739-49, 2849 All	dome lamp	1	4747948
1958	2793-94 All	dome lamp	1	4747946
1958	2839 All	dome lamp	1	4748381
1958	2547 SD	side rail lamp	1	4748380
1958	2831 All	side rail lamp	1	4748382
1959-60	All exc. 2145	circuit breaker feed-2 button	1	4769993
1959	2111-19-35-37-45, 2411-19, 2735	dome lamp	1	4774844
1959	2139	dome lamp	1	4774847

1959-60	2167, 2867	dome lamp	1	4774274
1959	2439, 2839	side rail lamp	1	4774846
1959	2837	side rail lamp	1	4774845
1959-60	All exc. 2135-45, 2735	rear compt. lamp	1	4765800
1959-60	All	seat adjuster	1	4765685
1959-60	All	seat adjuster control	1	4769991
1959-60	2119-35-39-45, 2339, 2419-39, 2735, 2839	window and seat control-4 button	4802222 RH	4802223 LH
1959	2167, 2867	window and seat control	4797367 RH	4770722 LH
1959	All	window control-2 button	4780159 RH	4780160 LH
1959	2111, 2411	window control	4773831 RH	4773832 LH
1959-60	All	window control jumper-exc. 2 button		1 4767575
1959-60	All	window control jumper-2 button		1 4780161
1959-60	All	tail gate window and seat feed		1 4769993
1959	2135, 2735	tail gate window	Front	1 4773904
1959	2135-45, 2735	tail gate window-jumper and power		1 4787516
1959	2137, 2837	window control	4769984 RH	4769985 LH
1960	2111-19-35-37-45, 2337, 2411- 19, 2735	dome lamp	1	4791062
1960	2139, 2339	dome lamp	1	4791061
1960	2439, 2839	side rail lamp	1	4791060
1960	2439, 2837-39	side rail lamp and dome and reading lamp	1	4792927
1960	2837	side rail lamp	1	4791059
1960	2111-19-35-37-39-45, 2337-39, 2411-19, 2735	reading lamp jumper	1	4774835
1960	2145	rear qtr. courtesy lamp feed	1	4778834
1960	All	SEAT ADJUSTER, w/4 way seat adj.	1	4813675
1960	All	seat adjuster-w/6 way seat adj. (2nd type-see note)	1	4800912
1960	All	window control-2 button	4802229 RH	4802230 LH
1960	2119-35-39-45, 2339, 2419-39, 2735, 2839	window and seat control-4 button		4802223 LH
1960	2111, 2411	window control-4 button	4802226 RH	
1960	2111, 2411	window and seat control-4 button		4802227 LH
1960	2137, 2337, 2837	window control-4 button	4802224 RH	
1960	2137, 2337, 2837	window and seat control-4 button		4802225 LH
1960	2167, 2867	window and seat control-4 button	4797367 RH	4802228 LH
1960	2135, 2735	tail gate window control	Front	1 4790971
1960	2135-45, 2735	tail gate window control	Rear	1 4793020
1960	2167, 2867	rear seat speaker-seat back	Front	1 4751752
1960	2167, 2867	rear seat speaker-seat back	Rear	1 4751753
1960	All	STRAP, seat adj. trans. to cable-w/6 way seat adj. (2nd type-see note)		AR 4778650
1955-56	All exc. 25/2762-63-64	GROMMET, tail and backup lamp wires to w/house	2	2962158
1959	All	RETAINER, hinge pillar wire harness	Front	1 4762291

NOTE: 1st type-w/three motor seat adj.
2nd type-w/one motor seat adj.

Group 13.095 RELAY, SEAT ADJUSTER

1956-58	All	RELAY, seat adjuster actuator	1	4746048
1958	All exc. 2793-94	seat adjuster memory	1	1116943
1958	2547-67, 2731-41, 2831 All	seat adjuster easy entrance memory unit-less lead wire	1	1116944
1958	2547-67, 2731-41, 2831 All	seat adjuster easy entrance memory unit-w/lead wire	1	1116947
1960	All	w/6 way seat-w/one motor seat adj.	1	4305815

Group 13.342 CLIP, BINDING END

1949-60	2167, 2567, 2867 All	front and rear bow	4	4561686
---------	--------------------------------	------------------------------	---	---------

Group 13.346 REPAIR PKG., FOLDING TOP WATER LEAK

1955-58	2567, 2867 All		AR	3630951
1955-58	2567, 2867 All	SEALER, conv. top	AR	1098737

Group 13.347 TRIM ASSEMBLY, FOLDING TOP COVER

NOTE: When ordering trim assy, the color of the top or cover assy. must be specified.

1955-57	2867	ivory	1	4246807
1956-57	2867 All	black	1	4248811
1956-57	2867 D	green	1	4248812
1956-57	2867 D	tan	1	4248813
1957	2867 All	medium blue	1	4271836
1958	2567 All	black	1	4275087
1958	2567 All	ivory	1	4275086
1958	2567	medium blue	1	4275479
1958	2567	medium green	1	4275480
1958	2567 All	medium pink	1	4275481
1958	2567 SD	pale blue	1	4275663
1958	2567 SD	turquoise	1	4275665
1959	2167, 2867	black (▲)	1	4287560
1959-60	2167, 2867	black-2nd type on 1959 (▲▲)	1	4295401
1959	2167, 2867	ivory (▲)	1	4287562
1959-60	2167, 2867	ivory-2nd type-on 1959 (▲▲)	1	4313801
1959	2167	turquoise (▲)	1	4287575
1959	2167	turquoise (▲▲)	1	4295406
1959	2867	blue (▲)	1	4287572
1959	2867	blue (▲▲)	1	4295407
1959	2167, 2867	beige (▲)	1	4287582
1959	2167, 2867	beige (▲▲)	1	4295405
1960	2167, 2867	blue	1	4313563
1960	2167, 2867	beige-w/black backing	1	4313562
1960	2167, 2867	beige-w/fawn backing	1	4327591
1960	2167, 2867	green	1	4313564
1960	2167, 2867	maroon	1	4313565

▲NOTE: 1st type: used thru body No. 6904 on 2167 and thru body No. 5470 on 2867.

▲▲NOTE: 2nd type: used with body No. 6905 and up on 2167 and body No. 5471 and up on 2867.

Group 13.349 TRIM ASSEMBLY, FOLDING TOP SIDE ROOF RAIL INSIDE

1955	2867	green top	4216046 RH	
1956-57	2867 D	green top	4248817 RH	4248818 LH
1956-57	2867 D	blue top	4248819 RH	4248820 LH
1958	2567	blue top	4275488 RH	4275489 LH
1958	2567	green top	4275490 RH	4275491 LH
1958	2567 SD	blue top	4275669 RH	4275670 LH
1958	2567 SD	turquoise	4275673 RH	4275674 LH
1959	2167, 2867	beige	4287528 RH	4287529 LH
1959-60	2167, 2867	black	4287524 RH	4287525 LH
1959	2867	blue	4287540 RH	4287541 LH
1959	2167	turquoise	4287544 RH	4287545 LH
1960	2167, 2867	green	4287548 RH	4287549 LH
1960	2167, 2867	blue	4287532 RH	4287533 LH
1960	2167, 2867	maroon	4313560 RH	4313561 LH
1960	2167, 2867	fawn-w/fawn backing for beige top	4327816 RH	4327817 LH
1957	2867 All	WELT, medium blue		1 4271831

Group 13.352 RETAINER, FOLDING TOP REAR QUARTER TRIM

1950-52	2567		4606460 RH	4606461 LH
---------	------	--	------------	------------

1959-60	2167, 2867 (10.695)	FASTENER, fldg. top compt. side panel weatherstrip .	4	4653672
1955-57	2867 All	WEATHERSTRIP, folding top compt.	4650300 RH	4650301 LH
1958	2567 All	4724530 RH	4724531 LH
1959	2167, 2867	4759061 RH	4759062 LH
1960	2167, 2867	4759096 RH	4759097 LH

Group 13.384 FASTENER-BUTTON-SOCKET-STUD-RETAINER, FOLDING TOP & DUST BOOT

1949-50	2567	trim stud-to side roof rail	6	105199
1955-58	2567, 2867 All	dust boot-on belt rail-screw type	AR	4231676
1958	2567 All	dust boot-on belt rail-rievet type	10	4719176
1959-60	2167, 2867	dust boot cover	28	4749582
1959-60	2167, 2867	dust boot-on belt rail	22	4773448
1959-60	2167, 2867 (10.695)	top comp. bag to body	11	4653672
1941-50	2567	BUTTON-on dust boot	16	4565454
1955-58	2567, 2867 All	on dust boot	24	4565454
1949-50	2567	SOCKET, dust boot fastener	16	105195
1955-58	2567, 2867 All	dust boot fastener	24	105195
1949-50	2567	STUD, dust boot fastener-on qtr. belt finishing mldg.	2	4564218
1952-54	2567, 2867	dust boot belt mldg. (No. 8-15x3/4")	AR	455448
1955-60	2167, 2567, 2867 All	dust boot-on body inner quarter	6	455520
1955-57	2867 All	RETAINER, dust boot-on rear seat back	1	4658414
1958	2567 All	dust boot-on rear seat back	1	4729729
1959-60	2167, 2867	dust boot-on rear seat back	1	4759853
1960	2167, 2867	SCREW, dust boot on belt rail fastener	22	4765556

Group 13.389 CURTAIN, FOLDING TOP BACK (WITH WINDOW)

1955	2867	black top	1	4216041
1956-57	2867 All	black top	1	4248814
1956-57	2867 D	green top	1	4248815
1956-57	2867 All	ivory top	1	4246812
1958	2567 All	black top	1	4275082
1958	2567 All	ivory top	1	4275081
1958	2567	blue top	1	4275483
1958	2567	green top	1	4275484
1958	2567 All	pink top	1	4275485
1958	2567 SD	blue top	1	4275666
1958	2567 SD	turquoise top	1	4275668
1959-60	2167, 2867	black	1	4292937
1959	2167, 2867	ivory	1	4292938
1959	2167	turquoise	1	4287597
1959	2867	blue	1	4287595
1959	2167, 2867	beige	1	4287602
1960	2167, 2867	ivory	1	4314113
1960	2167, 2867	green	1	4313568
1960	2167, 2867	blue	1	4313567
1960	2167, 2867	beige-w/black backing	1	4313566
1960	2167, 2867	beige-w/fawn backing	1	4327814
1960	2167, 2867	maroon	1	4313569

Group 13.392 ZIPPER, FOLDING TOP BACK CURTAIN

1953-54	2567, 2867	black top	Upper and sides	1	4623964
1955-57	2867 All	black top		1	4725428

1955-57	2867 D	tan top	1	4725429
1955-57	2867 D	green top	1	4725432
1956-57	2867 All	blue top	1	4725433
1958	2567 All	black top	1	4736414
1958	2567 All	turquoise top	1	4736421
1958	2567	blue top	1	4736417
1958	2567	green top	1	4736418
1958	2567 SD	blue top	1	4736420
1959-60	2167, 2867	black	1	4767124
1959	2167, 2867	copper	1	4767131
1959	2167	turquoise	1	4767130
1959	2867	blue	1	4767132
1960	2167, 2867	green	1	4767126
1960	2167, 2867	maroon	1	4786834
1960	2167, 2867	blue	1	4767125
1960	2167, 2867	fawn-w/fawn backing for beige top	1	4767129

Group 13.426 STRAP, FOLDING TOP HOLD DOWN

1955-57	2867 All		1	4631033
---------	----------	--	---	---------

Group 13.429 LOOP, FOLDING TOP HOLD DOWN STRAP

1946-57	2567, 2867 All		AR	4667402
---------	----------------	--	----	---------

Group 13.450 BOOT AND BAG, FOLDING TOP

1952	2567	green top	1	4191000
1955-56	2867	ivory	1	4246840
1957	2867 D	grey	1	4263035
1957	2867 D	blue	1	4263036
1957	2867 D	green	1	4263037
1957	2867 D	coral	1	4263038
1957	2867 SD	ivory	1	4271842
1958	2567	pink	1	4275513
1958	2567 SD	silver	1	4275687
1958	2567 SD	pale blue	1	4275688
1958	2567 SD	turquoise	1	4286267
1958	2567 All	ivory	1	4275691
1959	2167, 2867	ivory	1	4289525
1959	2167	beige	1	4289528
1959	2167	turquoise	1	4289526
1959	2867	blue	1	4290526
1960	2167	trim 212-med. grey	1	4327522
1960	2167, 2867	trim 213-266-276-blue	1	4319164
1960	2167	trim 214-green	1	4327523
1960	2167, 2867	trim 215-267-277-fawn	1	4313574
1960	2167, 2867	trim 216-268-278-maroon	1	4319165
1942-60	2167, 2567, 2867 All	BAG, folding top boot-black	1	4752245
1960	2167, 2867	fawn-w/fawn backing for beige top	1	4327815